

# Quick Start Guide

## RECYCLING AND DISPOSAL

Cardboard may be recycled. Dispose of foam in accordance with state or local ordinances.

## READ BEFORE UNPACKING

### Apparent Loss or Damage

Upon receipt of this shipment, if any evidence of loss or damage is revealed through visual inspection, then it must be noted on the freight bill and signed by the carrier's agent. Failure to do this may result in the carrier's refusal to honor loss or damage claim. The carrier will furnish you with the necessary forms to file the claim.

### Concealed Loss or Damage

When loss or damage is not apparent until the unit is unpacked, a claim for concealed loss or damage is required. When damage is discovered, make a written statement to the carrier for inspection. This request must be made within 48 hours of delivery. Keep all cartons and fillers for inspection. Carrier will furnish inspection report and necessary forms to file for concealed loss or damage claim, since such damage or loss is the carrier's responsibility.



**This Quick Start Guide offers basic information on initial Lift Chair setup only. Read the owner's manual and all supplemental information thoroughly before operating the Lift Chair for information on safety, operation, basic troubleshooting and care and maintenance.**

## LIFT CHAIR ASSEMBLY

Your lift chair will be shipped in two pieces: the chair-back and chair base. Assembly is required before initial use. Follow the instructions below for proper lift chair assembly. (Refer to the owner's manual for controller button instructions.)



**WARNING! You must ensure that the chair-back is properly secured before operating the lift chair. Failure to do so may result in personal injury and/or property damage.**

### Tools Required:

- 5-mm hex key (1)

### Follow these steps to assemble the lift chair:

1. Connect the hand control into the extension cable in the right pocket
2. Engage and hold the hand control's up/down switch in the UP position until the chair is in a fully lifted position.
3. With the pillow side of the chair-back and the lift chair armrests both facing the same forward position, slide the bracket of the chair-back over the bracket on the chair base, aligning the holes in both brackets. Insert the 4 bolts into the bracket holes and tighten with the provided hex key. **See figure 1.**

# Quick Start Guide

4. Plug the chair-back motor cable (labeled with a green-A tag) into the green-A slot of the controller box. Activate the actuator with the UP button extending the back actuator fully.
5. Remove the clevis pin from the motor mount, located on the back of the lift chair box. Place the motor between the motor mount, aligning the holes of the motor with the holes of the motor mount. Insert the clevis pin through the motor mount and motor.



**WARNING!** Make sure that the actuator is turned towards the right (if facing the back of the lift chair) to avoid possible damage to any lift chair components. See figure 2.

**NOTE:** Make sure that the clevis pin is properly secured before proceeding with the lift chair set-up.

6. Engage and hold the hand control's up/down switch in the DOWN position until the lift chair is fully reclined. Zip the chair-back fabric to the chair base.
7. Return the chair to the upright, seated position before use.

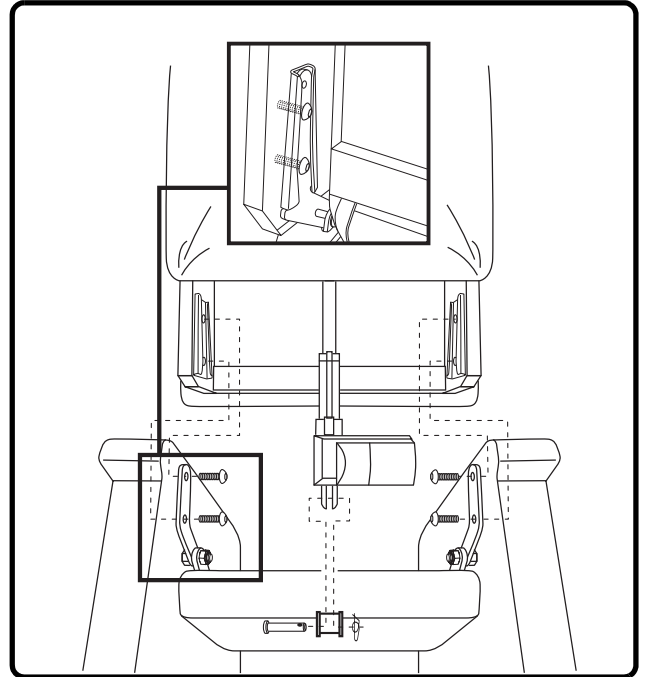 


Figure 1. Lift Chair Assembly

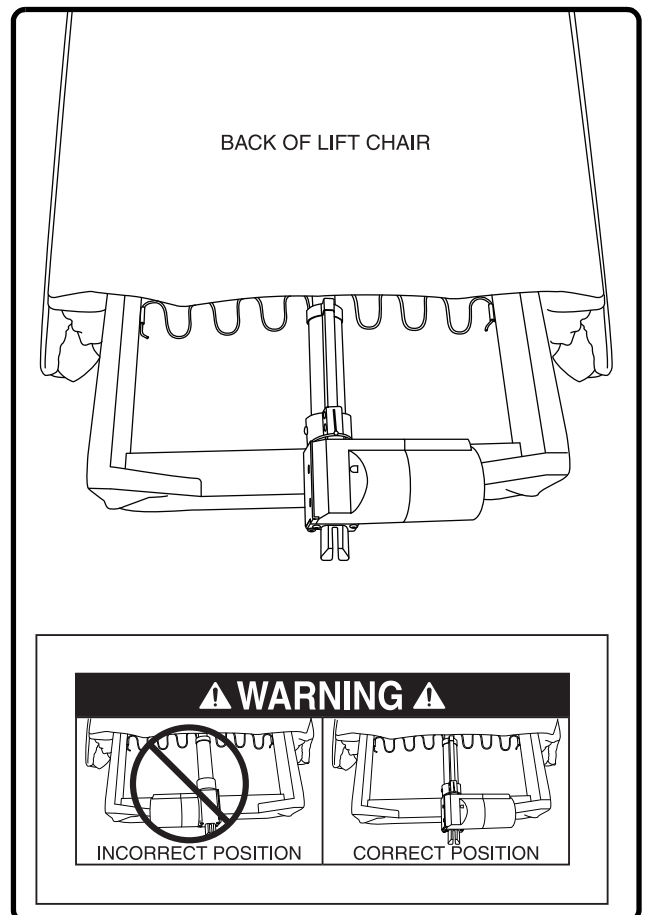 


Figure 2. Correct Actuator Positioning