


16018 Remote Control & Massage Functions

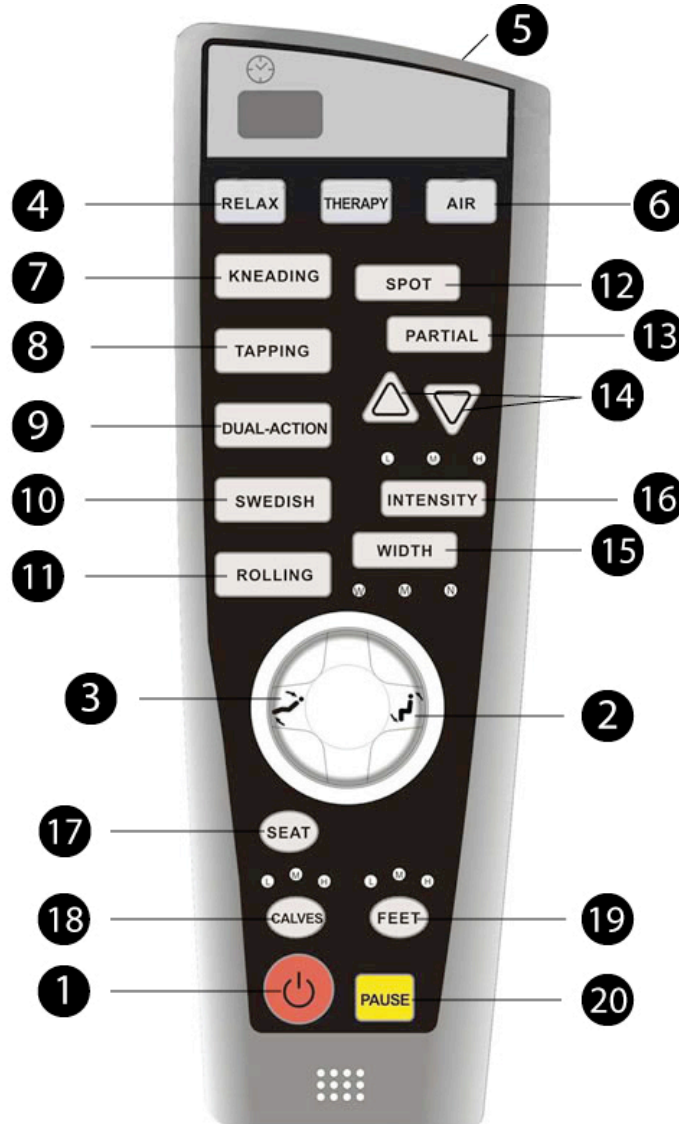

CONTROL BUTTONS FOR THE MASSAGE CHAIR

1. **On/Off** – Press this button once and the massage chair will be in idle mode and ready for your next command. Press this button again to stop all massage functions. The massage rollers will return to their original positions.
2. **Raise Leg Rest / Recline Backrest** – This is the angle adjustment control button for the massage chair. The leg rest and the backrest will adjust simultaneously. Press the button once to begin the adjustment process. When you reach a comfortable position, press the button again to stop the adjustment process.
3. **Recline Leg Rest / Raise Backrest** – This is the reverse angle adjustment control button for the massage chair. It runs in the reverse direction of

Button 2. The leg rest and the backrest will adjust simultaneously. Press the button once to begin the adjustment process. When you reach a comfortable position, press the button again to stop the adjustment process.

AUTO PROGRAMS

4. **Relax.** Please note that Auto Programs cannot be combined with each other or other functions.
5. **Therapy.** Please note that Auto Programs cannot be combined with each other or other functions.
6. **Air.** Please note that Auto Programs cannot be combined with each other or other functions.

MANUAL BACK MASSAGE FUNCTIONS

7. **Kneading** – Press once to activate the Kneading function for full back massage at medium intensity. After starting the function, the intensity can be adjusted by using Button 16. Press the Kneading button again to stop the Kneading function.
8. **Tapping** – Press once to activate the Tapping function for full back massage at medium width & intensity. After starting the function, the width and intensity can be adjusted by using Buttons 15 & 16. Press the Tapping button again to stop the Tapping function.
9. **Dual Action** – Press once to activate the Dual Action function for full back massage at medium intensity. After starting the function, the intensity can be adjusted by using Button 16. Press the Dual Action button again to stop the Dual Action function.
10. **Swedish** – Press once to activate the Swedish function for full back massage at medium intensity. After starting the function, the intensity can be adjusted by using Button 16. Press the Swedish button again to stop the Swedish function.
11. **Rolling** – Press once to activate the Rolling function for full back massage at medium width & intensity. After starting the function, the width and intensity can be adjusted by using Buttons 15 & 16. Press the Rolling button again to stop the Rolling function.

NOTE: Kneading, Tapping, Dual-Action, Swedish, and Rolling functions cannot be combined.

SPOT & PARTIAL MESSAGES AND MESSAGE ADJUSTMENTS

12. **Spot** – This Spot back massage button allows you to select a Spot massage for any part of the back by pressing Button 14 until the Spot massage reaches your desired position. Press the button once to start the Spot massage mode. Press the button again to stop the Spot massage mode and resume full back massage function.

NOTE: The Spot mode cannot be activated with the Rolling function.

13. **Partial** – This Partial back massage button allows you to select a Partial massage for any part of the back by pressing Button 14 until the Partial massage reaches your desired position. A Partial massage operates a massage function within a 3 1/8” tall window. Press the button once to activate the Partial massage mode. Press the button again to end the Partial massage mode and resume full back massage function.
14. **Up/Down** – Position adjustment buttons for the Spot and Partial massage modes. Press and hold the button until the desired position is reached.
15. **Width** – The width adjustment button for the Tapping and Rolling functions. Goes from Medium to Narrow to Wide and then back to Medium.
16. **Intensity** – The intensity adjustment button for the Kneading, Tapping, Dual-Action, Swedish, Rolling, and Auto Program functions. Goes from Medium to High to Low and then back to Medium.

AIR SQUEEZE FUNCTIONS

17. **Seat** – Press this button once to start the air squeeze and vibration function in the seat. Press again to stop the function.
18. **Calves** – Press this button once to start the air squeeze function in the calves. Press again to adjust the intensity. Goes from Medium to High to Low to Off and then back to Medium.
19. **Feet** – Press this button once to active the air squeeze function in the feet. Press again to adjust the intensity. Goes from Medium to High to Low to Off and then back to Medium.

NOTE: Air squeeze and vibration functions can be combined with the Kneading, Tapping, Dual-Action, and Rolling functions to enjoy multi-function massage.

20. **Pause** – The Pause button stops all massage functions temporarily. The backlight on the original massage button will remain activated. In Pause mode, only the Pause, On/Off, Recline, and Raise buttons can be used. Press the Pause button again to resume the original massage function.

COMPLETING THE MASSAGE

Press the On/Off button to stop the currently running massage. The massage rollers will resume their starting positions. To completely power down the massage chair, switch the power button under the chair to the “0” position and then disconnect the power cord from the electrical outlet.